

## Instructions to assembly Mister Cart



1. Cart parts that would be inside the box



415 Annagem Blvd. Mississauga, Ontario, Canada L5T 3A7 Tel: 905.795.0122 Fax: 905.795.0038 Toll Free: 1.800.387.3210 Toll Free Fax: 1.800.709.2896 www.nacecare.com 2. Tools needed – Phillips screwdriver, 13 mm socket and wrench, 12 mm wrench, 2 x 10 mm wrenches



3. Remove castors from mister machine using a 12 mm wrench




4. Using the cart handle frame and two bases join using the 13mm socket and 13mm wrench




5. Disassemble the castors that came with the cart using the two @ 10mm wrenches



6. Align the front skid plate on top of the base frame

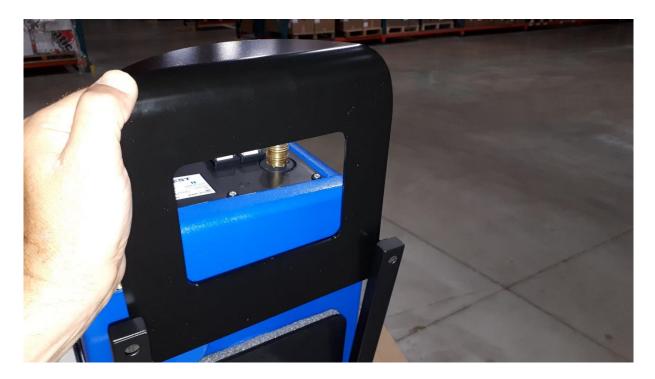

7. Align castor bolt to be threaded into tank

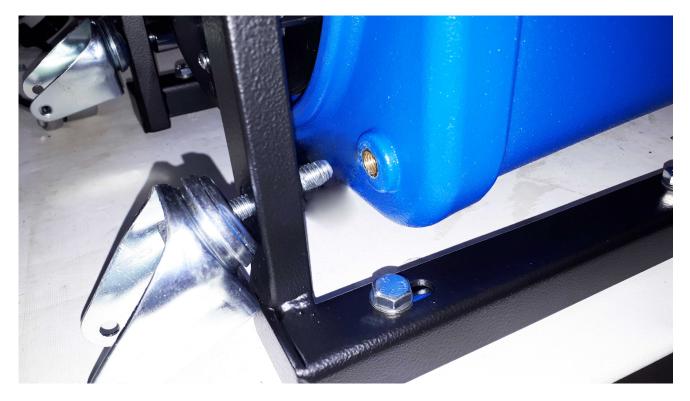




8. Hand thread the bolts back into the machine base, then using the 13 mm socket tighten until snug.

9. Attach the grey wheels and caps to the castor assembly



## 10. Attach front clip to top of tray frame

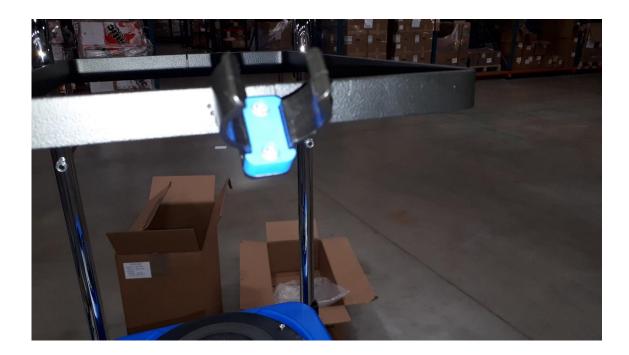

11. Slide grey clip holder into slots



12. Attach grey holder to handle frame using three Phillips screws



13. Put grey tray into top frame

